

Pulsar2

user's manual

Version 5.63

10/02/18

<http://www.geminitelescope.com/pulsar-goto-controllers/>

Controller Pulsar 2


Driver Unit, Motor, Power and Encoder connector



5,5/2,5mm DC socket, center positive

Hand Controller Ver2 with integrated GPS Antenna

Hand controller Ver1

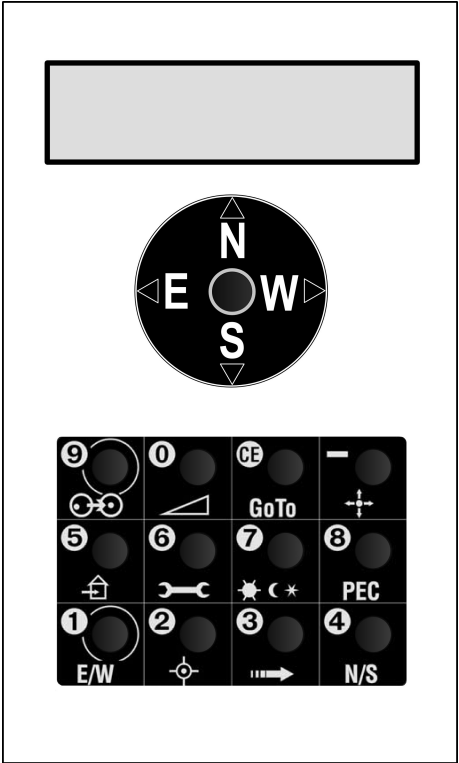

Index

SAFETY.....	3
GENERAL.....	4
QUICKSTART.....	4
Hand Controller Menu navigation.....	4
Information on the Display of the Ver1 Hand Controller.....	5
Information on the Display of the Ver2 Hand Controller.....	6
Initializing.....	6
USING THE INTELLIGENT FEATURES.....	8
Homing/Parking position.....	8
Absolute Reference (with encoders fitted to the mount axis, index signal available).....	9
Flip Correction (German mount).....	10
Swap tube (Meridian flip).....	10
Pole Crossing.....	10
Go To.....	10
Using your GPS.....	11
Remote Operation.....	11
ASTROPHOTOGRAPHY.....	12
Guiding hints.....	12
USING PULSAR2 WITH A PC.....	13
Upgrading the firmware (Web and USB mode).....	13
PROGRAMMING PEC.....	13
Hints for programming PEC.....	14
HAND CONTROLLER MENU.....	14
TROUBLESHOOTING.....	16
KEY TO THE ICONS OF THE KEYBOARD.....	17
LX200 COMPATIBILITY.....	18
AUTOGUIDER PORT.....	18
AUXILIARY PORT (8 PIN).....	18
CATALOGUE DATA UPLOAD.....	19
HARDWARE OPTIONS.....	19



AG, AUX, Hand, LAN, USB ports shown

SAFETY

The unit is protected against reverse polarity, short circuit of the motor cables and over-voltage. It is fused at 6,3Amp (slow). Please do not connect or disconnect cables under tension! If you feel vibration at the DEC motor in standstill, your power supply is noisy. The unit runs from 12 - 24V DC (max recommended value 18V) and draws 3A max during a GoTo. (depending on motor parameters) but may draw more in subsecond peaks.

There is a low voltage warning below 10V.

Please use overvoltage resistant optical isolators when connecting the USB and serial ports to a PC. **The unit is NOT designed for use in condensing humidity conditions. For longer periods of bad weather keep it indoors or use a dehumidifier!**

Power supply choice: universal laptop psu, traditional linear (transformer +rectifier), car or solar panel lead battery are all suitable. Switching PSUs can sometimes create interference and not work properly. **IF YOUR MOTORS DO NOT WORK PROPERLY STOP AND USE A CAR BATTERY. IF THIS DOES NOT SOLVE THE PROBLEM CONTACT US FOR ADVICE!!**

GENERAL

Pulsar2 is a universal drive controller that can be user programmed for a wide range of mounts fitted with servo or bipolar stepper motors. It will work with motors only (steppers) or motors + incremental (5V quadrature) encoders. The standard unit delivers 2A/channel, a custom version is available with 4A capacity, with active cooling. The unit is LX200 and ASCOM compatible, thus you can use it with your favourite Planetarium Program (Cartedu Ciel, Guide, Desktop Universe, The Sky, etc) and other sw like PemPro, CCD Autopilot, etc..

Pulsar will work as a standalone driver using the hand controller or connected to a PC (no hand controller is needed). If connected to a PC Pulsar2 can be reached through the ASCOM platform (driver must be installed) or by setting the mount type to LX200 (non GPS) or via the Pulsar Commander (<http://www.geminitelescope.com/download.html>) and the LAN based virtual hand controller.

To start using Pulsar2, connect the hand controller, the cables to the mount and power. To move the telescope select the desired speed (see below) and press the joystick. There is no power switch, you will either unplug power or send the mount to homing and leave it powered until next use. Pulsar2 needs to be programmed for your mount (mount and user parameters on p14) before it can perform correctly. PEC on Pulsar2 will only work if the dedicated encoder is fitted to the RA worm.

Here is a link to using Pulsar2 with MaximDI http://www.geminitelescope.com/Manuals/P2_MaxIm.pdf

Detailed info on connector pinout: <http://www.geminitelescope.com/Manuals/GeminiPulsar2PinoutInformation.pdf>

QUICKSTART

Hand Controller Menu navigation

Use the keypad to reach the menus. The North and South push of the Joystick (js) navigates the menu up and down, the West push is Enter (yes), the East is Esc (no). The button CE also has the Esc function. Icons give a clue to the menus. The controller has a multi level menu structure. See the illustration below and also "KEY TO THE ICONS OF THE KEYBOARD" for more info.

example1 - how to set the goto speed.(setting a value in the menu)


left click js to escape the init menu, Press key 6 (parameters), right click js, down(S) click js 4 times (GoTo speed), right click js, the character with the underscore is waiting to be changed, to change hit the appropriate key (eg 7). As you type, the cursor moves on. To return to the previous character sclick js down(S). When finished editing the value, right click js and repeat the editing for the dec speed. Right click js when done. Left click js to escape the user menu.

Example2 - how to change RA motor direction (choosing one of two values)

left click js to escape the init menu, Press key 6, up(N) click js (mount parameters), right click js, down (S) click js 3 times (Rotation L/R), right click js, the cursor in the bottom line shows which value is actually selected. To accept without change click js to the side where the cursor is. To change, click js to the opposite side respect to the cursor. Left click js to escape from the menu.

Example3 - how to select the active speed (selecting from several values)

left click js to escape the init menu, Press key 0, up or down click js until the desired speed is displayed, right click js to select the desired speed.

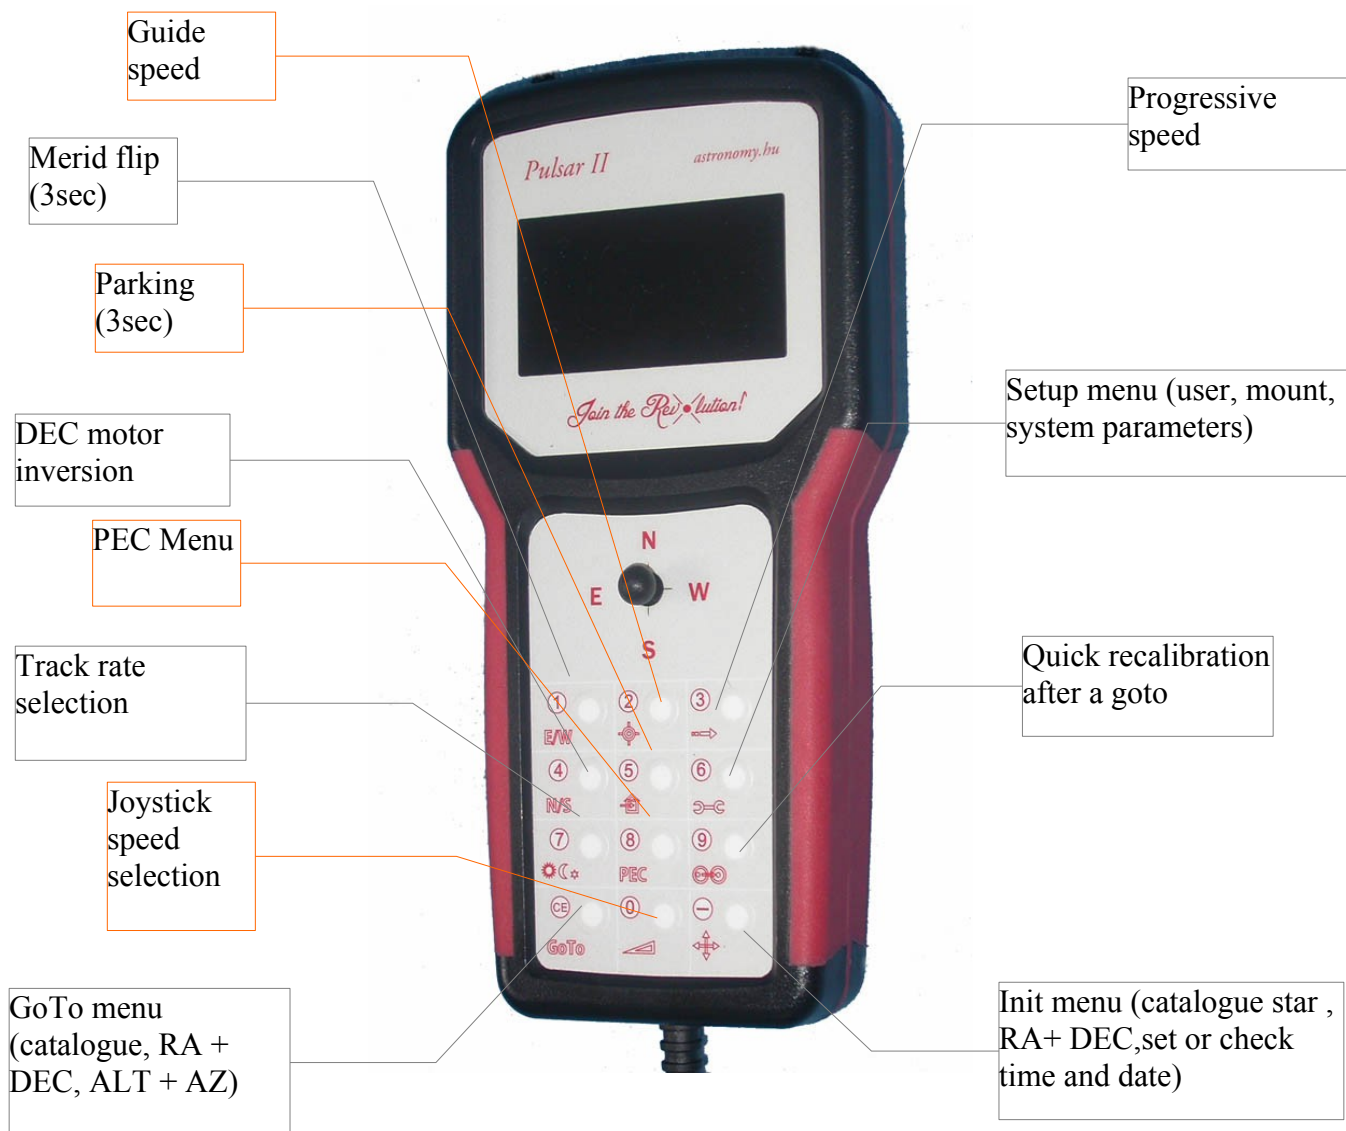

Information on the Display of the Ver1 Hand Controller

The 2x16 character LCD shows Right Ascension (hh,mm,ss and decimals) and Declination (dd,mm,ss). Please note that the last digit may change abruptly due to rounding errors!

R/D	Right Ascension and Declination of the actual position
p	PEC ON.
r	refraction correction ON.
e/w	shows which side of the Meridian the tube is.
S	Stopped (autostop function, select Sidereal rate to exit!).
E	Error (motors stopped after reset or power failure), to exit select sidereal speed in the rate menu
H	Pulsar is in home mode
@	Low voltage.(together with an acoustic signal)
!	signal from PEC encoder received.

If you press the side button (maplight) the **RA worm position counter** value appears at top left and the effect of refraction is removed from the values of the coordinates (for information only, values are not actually changed)

IMPORTANT NOTE

Before first use you must check and enter correct date and time (in UT) and your geographical

Lat/Long in decimal format. This is necessary for the correct operation of the driver. Attention: EASTERN longitude is negative!!!


Information on the Display of the Ver2 Hand Controller

Ver2 Hand Controller has an integrated GPS, if enabled from the user menu/read GPS, this will update the above parameters.

On the Ver2 Hand Controller press and hold button 7 to turn the maplight on. You must escape from the rate menu afterwards.

Top row, from left to right


date/longitude, GPS signal ok, time/latitude (time and position info is showed blinked every 3 seconds)

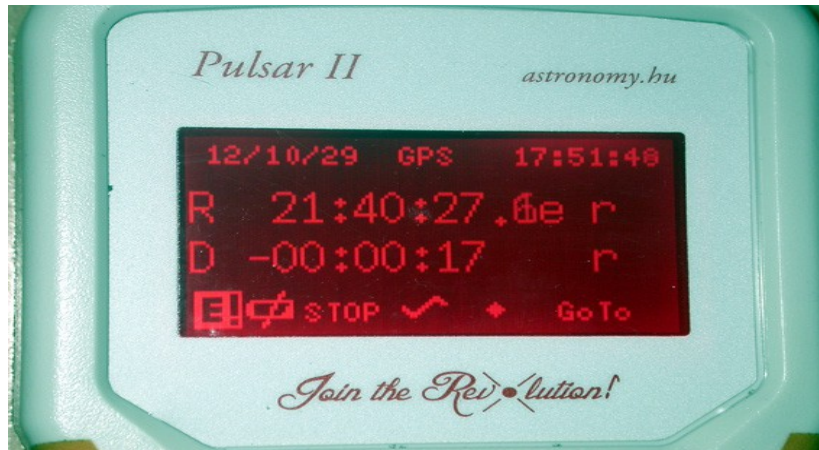

Bottom row, from left to right

Error or Homed, low battery, stopped, PEC, tracking rate (sid), active speed

Graphical aid for initializing a German mount

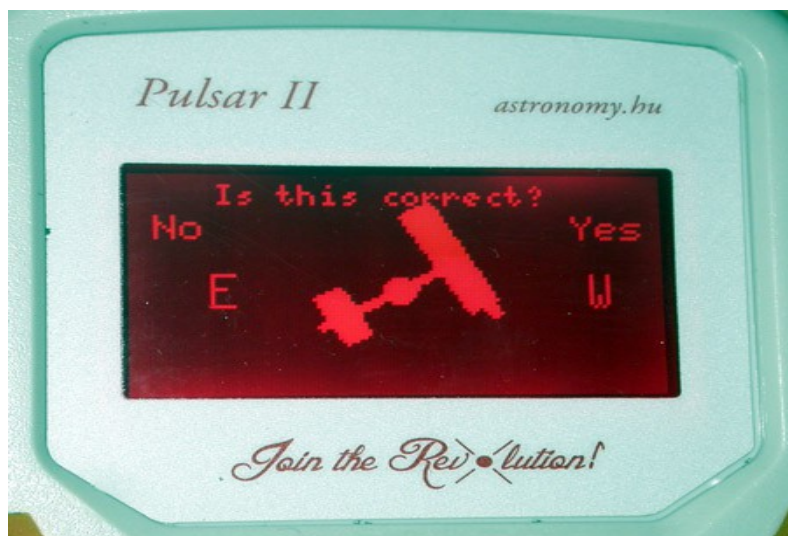


Initializing

Initializing - this is the first step of use. It aligns the telescope with the equatorial coordinate system. Pulsar2 uses a one star alignment. You must do it every time you set the telescope up in a new position. Polar align the mount first! For permanent setup it is enough to do it once (if you shut down by homing/parking the mount).

You need four piece of information for a correct init.

- 1 rotation of the RA axis – the mount must slew West if the joystick is pressed to the West, if not, change rotation in the Mount Parameters/Rotation menu.
- 2 rotation of the dec axis – pressing the joystick North must move the OTA North. If not, long press (3s) the N/S button to change motor rotation.
- 3 The star (or coordinates) you are pointing at
- 4 The side of pier/meridian where you have placed the OTA.(skip this if using a fork mount)

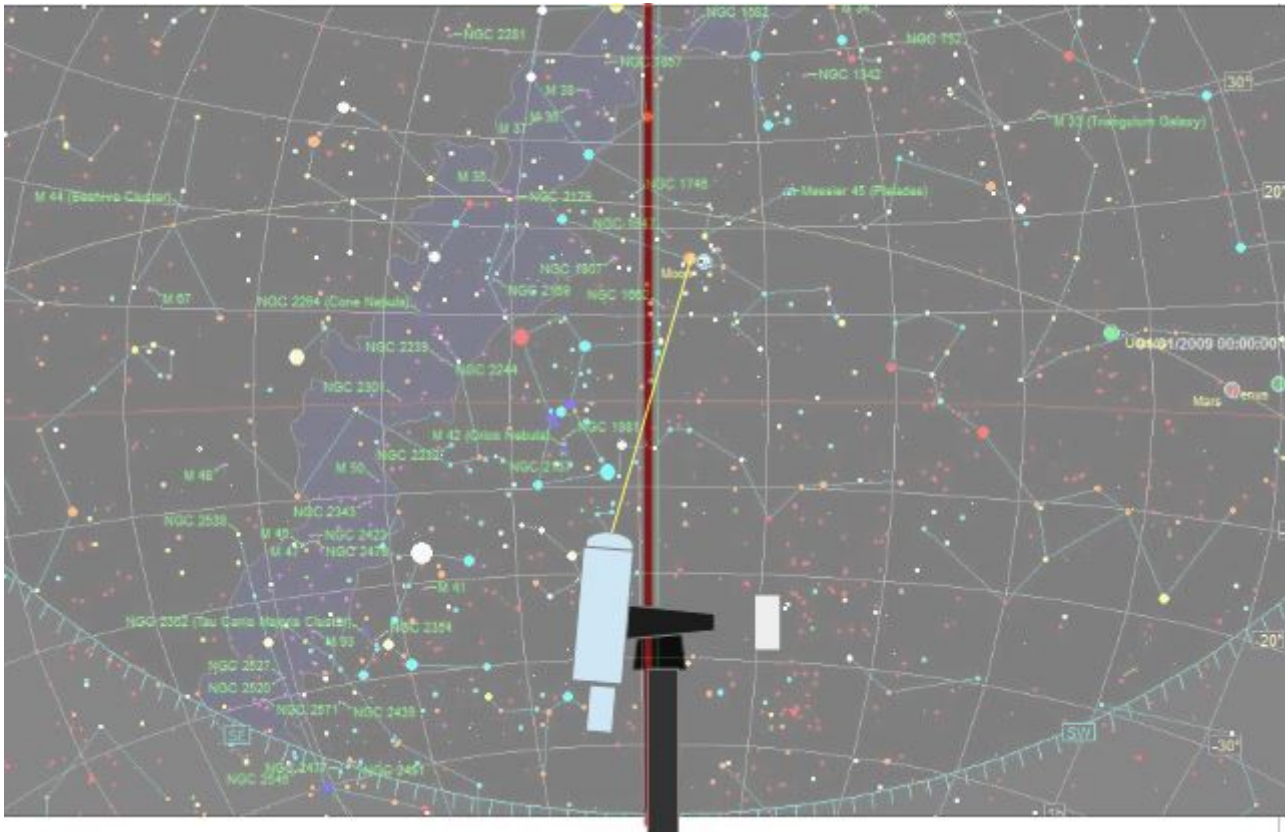


In the above example the OTA is on the Eastern side of the pier/meridian (red line) and it points to a star slightly west of the meridian (yellow line). You are facing due South.

Using Autoinit (this is the default menu after switching the controller on. Click West to proceed):

check the rotation of the dec axis as prompted,
align OTA at the meridian, or due South in other words,
align OTA at cca DEC=0 degree (the equator, OTA at right angle to the hour axis)
mount starts to slew to the nearest reference star
when stops, center the star in the finder and press button 9 as prompted,
tell which side of the pier the OTA is. **(NOT the star)**

The autoinit procedure will work correctly in you have set RA rotation (Mount parameters) correctly and if the star database is loaded into the internal memory. (see Catalogue Data Upload paragraph on p.19).

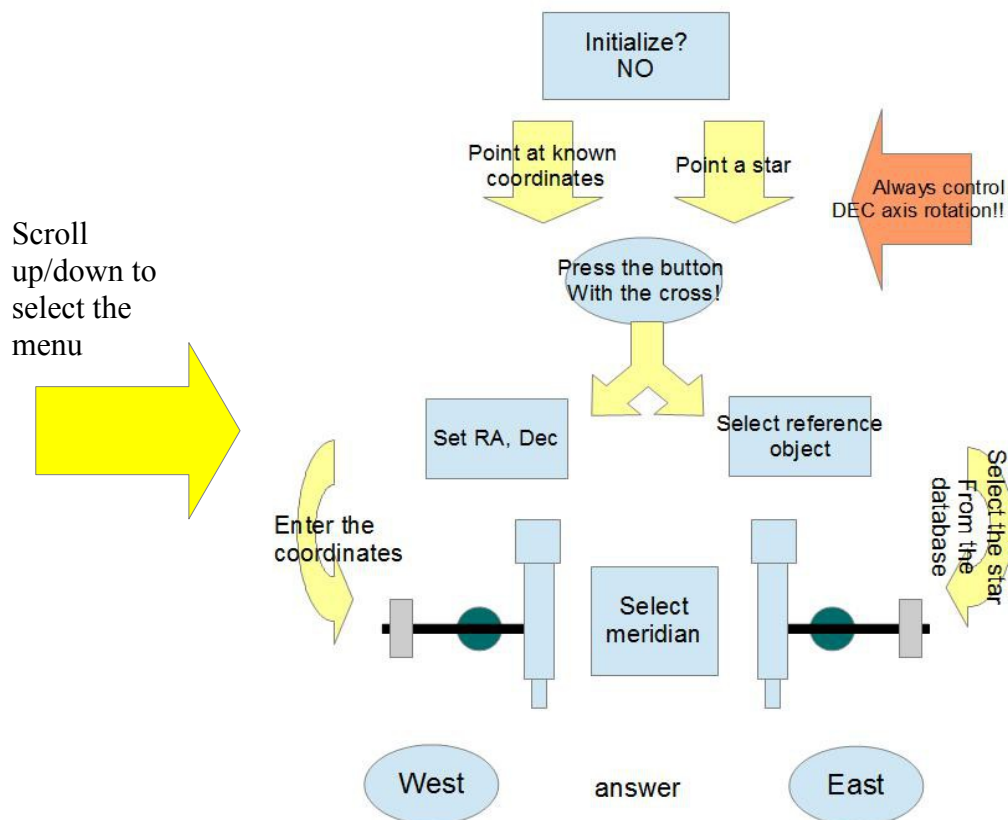

Flow chart of the Init process using an arbitrary star from the database or coordinate entry **ATTENTION!!!**

A German Equatorial mount will not work properly with a simple sync command. You must enter East or West via the hand controller or the virtual hand controller. You can sync from a planetarium sw or Maxim later on, to maintain pointing precision. **Fork Mounts** can start with a simple sync as well.

Please always initialize the mount in the Southern half of the sky (from E to W)!

A useful link: <http://www.youtube.com/watch?v=PtAfKWscf80&feature=youtu.be>

USING THE INTELLIGENT FEATURES

The features covered in this paragraph are: Homing position, GoTo, Swap tube, Flip correction, Absolute reference, Pole crossing, GPS use, Remote operation.

Homing/Parking position

Homing – the mount is sent to a previously saved position and all motions are turned off. Power can be turned off. Parking – the mount is stopped where it is at the time of the command (but here it is used as a synonym of Homing). Pulsar2 has full Homing support but Parking can only be achieved by selecting “still” rate. Unpowering leads to loss of position in this case. When you use Park/Unpark from ASCOM or other programs, this refers to Homing. Home position is where the telescope/mount is left when out of use. When the unit is switched ON and is unparked it is ready for use without initializing. It is a necessity in an observatory but useful in the field too. You can also leave the unit powered while homed/parked.

To program the homing/park position:


- 1 Initialize (on a star in the Southern half of the sky) if not yet done
- 2 Slew the mount to the desired homing position (OTA always on the opposite side of pier respect to the position in the sky)
- 3 Enter the Setup/User Parameters/Home position menu and save the position (click west)

When you finish the observing session press the Home button for 3 sec. and the mount goes to its homing position, then stops the motors. If you have enabled refraction correction there will be a small motion after the motors have stopped - this is the compensation for refraction.

You can also home/wake the mount using PulsarCommander or any other suitable sw that uses the Ascom platform.

Now you can switch power OFF or alternatively, leave it On. Power consumption will be minimal in standstill.

To start a new session simply switch power ON, wake the mount (turning power ON does NOT wake the mount if it was parked) and go! To enhance positioning accuracy you can fine tune the internal clock (see the Hand Controller menu overview) or wait for the GPS signal before Unparking the mount.

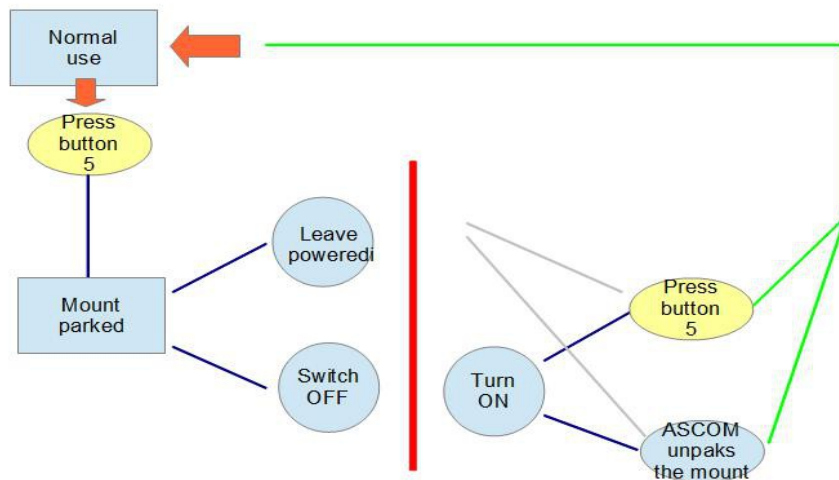

The home/park - wake/unpark cycle

Note: please avoid a precisely N-S position of the DEC axis as home position!

This may lead to false E/W information at startup. If you have Pulsar2 goto mode selected in user/goto mode menu, homing will always put the OTA on the side of pier OPPOSITE of the celestial position. E.g. if the OTA points in the East, the OTA will sit on the Western side of the pier (German mount). To disable this feature use horizon mode goto.

Absolute Reference (with encoders fitted to the mount axis, index signal available)

If you are using a mount with incremental encoders that have an absolute position signal (one in each full rotation) you can use this to initialize the mount without finding a star. This is useful in remote operation. You will need to watch the mount to be successful (IP cam). This is how to use this feature. This video shows the procedure with a G53F: <http://www.youtube.com/watch?v=0RQyp3Hnb08&feature=youtu.be>

Initialize the mount as you normally would.

Enter the Mount Parameters/Set reference menu and follow the instructions on the LCD. The aim is to rotate the axes until the encoder signal has been found.

When finished, exit the menu.

From now on you are able to initialize the mount without stars.

Enter the User parameters/Get reference menu and follow the instructions on the LCD. The procedure is similar to the above but now the previously saved positions will be recalled.

More on the position of the reference signal is in the mount manuals.

The RA axis is factory adjusted to have the encoder reference within +/-1 hours of the meridian. There is a tutorial video at <http://www.geminitelescope.com/gemini-german-fork-mounts-goto-manuals/>

Flip Correction (German mount)

If the OTA optical axis is not perpendicular to the declination axis a meridian flip will be imprecise. In the extreme vicinity of the Pole you will not be able to reach your targets if this error is present. However, up to 85 degrees Pulsar2 offers the possibility to correct for this error by first learning it. Enter the **Flip correction** menu in Mount parameters and follow the instructions. P2 will automatically select a suitable star that you can precisely center and then do the flip. After re-centering the star the correction is saved. Once a value has been saved the feature is active. If you want to disable it re-run the learning routine without making any corrections. This will save zero as correction value. There is a tutorial video at <http://www.geminitelescope.com/Manuals/flip.swf.html>

Swap tube (Meridian flip)

This command takes the tube from one side of the mount to another. **Swap tube** is activated by pressing button **1** for 3 sec. After the flip is completed the telescope points at the same position as before.

To have an **accurate Swap tube** it is important to check the orthogonality (at 90 degree) of the DEC and tube optical axis (see the G-41/42 manual for details) or program flip correction. A precise polar alignment is a must.

Alternatively you can set the correction in the **Flip correction** menu in Mount parameters. The error saved will be used to correct all goto-s which include swapping of the tube. This correction will not work over 85 deg declination.

If the DEC axis starts turning the tube when the RA motion starts the tube might hit the mount. To avoid this there is a programmable **delay** for the DEC motion. This is programmed in the **User parameters** menu.

Pulsar2 will NOT stop tracking at the Meridian or make a flip. Control programs like CCDAutopilot, ACP, SGP are responsible for this task. Pulsar2 will flip if the object is past the Meridian, the OTA is West of the pier and the control software tells it to slew to the current coordinates (resends the slew command).

Pole Crossing

Reaching the Northern sky may be very difficult if you must rotate nearly 180 degree in RA. Instead, crossing over the Pole provides simple access. When you give a GoTo command the software optimises the route and decides if it is more economic to approach the target by crossing the Pole or rotating the Hour axis and staying on the same side of the Pole. If you have a fork mount this feature will automatically be disabled.

The direction of pole crossing is set in the Setup/User Parameters/Pole crossing /**Tube rotation** menu that defines the direction of the declination slew. With cables at the sky end (Newtonian) you will want to slew North, with a refractor or SC to the South. This way you can avoid tangled cables.

Go To

German equatorial mounts may not provide free access to all sky positions because the telescope can hit the pier/mount (or the mount hits itself) as it moves away from the Meridian. To avoid this risk select Pulsar2 mode in the User Parameters menu.

To make a goto with Pulsar2 you can use the internal data bases (see data base upload at the end of this manual), enter directly RA+DEC, or use the LX200/Ascom interface and a Planetarium program.

The tutorial video for making a goto is here. <https://www.youtube.com/watch?v=PtAfKWscf80&feature=youtu.be>

Pulsar2 has the following **GoTo modes** (selectable in user parameters menu):

- 1 **horizon** – commands below the horizon are rejected. The

mount will not cross the North line however, it will turn back instead, to avoid making more than 360 deg rotation. Select this if you use a fork mount or do not need a meridian flip at all.

- 2 **Pulsar2 Logic** – pulsar2 logic – an advanced goto management that selects the optimum track for each goto. It always puts the OTA on the side of pier opposing the sky position (West of the pier for an object in the East)

Note: if you wish to start imaging an object in the East with the OTA East of the pier you must slew to the object manually, using the joystick or initialize in the east and select “horizon” as goto mode.

Using your GPS

The Pulsar2 controller accepts serially connected GPS units using the (4800 baud) NMEA protocol (a GPS receiver is not sufficient!!). Pulsar2 will ask for the UT and geographical coordinates if prompted. This feature allows for the trouble free use of the intelligent features when you are travelling to dark sky locations. You will need a special cable for connection. The 8 pin Aux (iLary) connector has the necessary contacts. No power is available here for the GPS.

The Ver2 hand controller has a built in GPS unit that will find the coordinates and time after each startup if enabled in [User Parameters/Read GPS menu](#).

- 1 Make sure that you have selected NMEA 4800 baud as the communication protocol (Setup/Interface menu on the GPS)!
- 2 Let the GPS collect the navigation signal, connect it to the Pulsar2 Aux port (with the adapter)!
- 3 Enter the GPS menu (user parameters). Pulsar will acknowledge GPS data. Now you can remove the cable and use the driver.

You will need a dedicated cable (available from Gemini or DIY) to connect your GPS to Pulsar2 with the serial cable available from the GPS manufacturer.

Remote Operation

For a German Equatorial mount the P2 goto logic (user parameters) provides safe access to all sky positions. The only drawback - compared to fork mounts - is the longer GoTo time in some cases and the reduced pointing accuracy (the result of auxiliary motions).

It is recommended to use reduced GoTo speeds (e.g.: RA300, DEC400) and **lightly locked** slip clutches in remote mode. If refraction correction is used, the correction will be executed within 10 sec of the last GoTo. If you start an end of slew exposure without a delay the image might be trailed. Use the Pulsar2 Ascom driver with observatory automation sw.

It is necessary to use optical isolators on serial links in the observatory. All electronic devices must share a common protective grounding. The pier or mount should also be grounded.

Below is a guide with suggested steps of a (remote) permanent setup, based on a G53F mount.

Decide on the mode of connection. You have USB (plug and play but in case of failure must be unplugged and plugged), serial (stable but you need a special cable and an RS232 port on the PC, detailed in the FAQ) or virtual serial over LAN (you need to install the driver, found on the downloads page)

Ascom setup: in the Ascom setup dialog window choose Generic Hub as telescope. Next, configure Generic Hub to have Pulsar2 as telescope. This way several third party programs can access Pulsar2.

In case you use a German mount, in MaximDL set “Auto pier flip” and in the guider setup dialog set “change X,Y” (upon pier flip) and “automatically apply spin control changes”

Polar align the mount either with the polar finder or your preferred method. A precise albeit not simple method for polar alignment is found here (doing something right is most of the time a bit complicated :-)

http://www.astrosurf.com/c2a/english/support/help/Html/Acquisition_d_images_et_methode_de_King.htm

Note: the fact of no dec drift at the meridian is not a sufficient sign of good polar alignment!!! The elevation of the polar axis can still be out.

Make a one star reference (using the hand controller or the virtual hand controller of PulsarCommander) as described in this manual on p7. Now you are synced to the Equatorial coordinate system. **For GEMs it is NOT possible to initialize without the hand controller (physical or virtual) because the side of pier information will not be correct. A fork mount can be synced without the hand controller, on any star/object from a planetarium.**

Save a Parking position (this is a software level parking/homing, not with sensors) taking care not to point below the horizon and according to flip rules (the OTA is always on the opposing side of the pier respect to where it points)

Unparking via ascom is available if the mount is shut down by Parking. If it shuts down due to power loss, you can still use the absolute reference of the encoders (G53F, MoFoD), if you have programmed it before. In any other case you have to repeat the one star initialize process to start your new session.

Program flip correction for your OTA. Note: flip correction has to be reprogrammed after any adjustment to the OTA (collimation, new camera, etc).

Calibrate the absolute reference of the encoders (G53F, Mofod only) as described in mount's manual and in this manual. Check out also the demo videos.

The LAN based virtual hand controller is a useful tool that will always work. For installing see the manual on the manuals page. Alternatively you have the virtual hand controller of PulsarCommander, but for this you need to disconnect Pulsar2 from ascom and connect ONLY PulsarCommander.

Gemini is offering safe remote boxes that protect your telescope under all conditions.

<http://www.geminitelescope.com/robotic-observatory-telescope/>

This diagram explains connections between Pulsar2 and other parts of the system:

<http://www.geminitelescope.com/Manuals/connect1.pdf>

ASTROPHOTOGRAPHY

Recommended settings

For guided astrophotography set a guide speed of 1-5, depending on the pixel resolution! (1 for 1"/pixel) Your system is well tuned if the residual guiding errors after each correction do not exceed 0.1 - 0.3 pixel. The smallest accepted correction time is 0,01sec. Pulse guide is available.

The **Stop Current** (Setup/Mount parameters/Stop current) should be close to the **Tracking Current**.

Guiding hints

A pixel resolution smaller than 1"/pixel will not result (under normal sky conditions) in more image detail but more trouble and longer exposures only. It is strongly recommended NOT to go below the actual seeing conditions with the image scale. Alternatively you should set the low threshold for guiding at a higher value during poor seeing conditions. The reason is that seeing changes star positions faster than guiding, so frequent guiding will increase blurring rather than decreasing it. Seeing should be evaluated with the actual imaging instrument as it will vary with aperture (changes significantly above cca. 15cm due to the size of air cells).

If the guide sw is doing automatic calibration, the measured speed should be decreased by cca 20% for best results. If this is not possible, increase the guide speed in Pulsar2 after making the calibration. In case of overcorrection, decrease aggressiveness.

For unguided photography program the PEC, use Refraction Correction and set the Stop Current at a value within 10% of the Tracking Current or the same.

To get the highest possible tracking precision, programming the PEC at the actual sky position is recommended. Before using an autoguider cable make sure that it has the correct pinout and orientation! An alternative to cable guiding is the USB/serial Telescope connection which gives better results

PEC AND Autoguiding is supported in Pulsar2. There is a comprehensive article on Autoguiding at <http://www.geminitescope.com/gemini-german-fork-mounts-goto-manuals/>

USING PULSAR2 WITH A PC

Models with a DC 5,5mm power socket *do not need a driver for Win7 and above*

It is necessary to use optical isolators on serial links in the observatory.

First install the USB driver (available at the Pulsar2 site). It is compatible with Win XP and Win7 (32 and 64 bit).

Tutorial: <http://www.youtube.com/watch?v=iwV-0tudPJQ&feature=youtu.be>

Check in My Computer/Properties/Hardware/Device manager the number assigned to the virtual COM port and set this number in Pulsar Commander or any other software that needs to connect to Pulsar2. It is recommended to set the computer time to UT, the time format to 24h, to disable daylight saving time correction and regional settings to UK. Only one program at a time can connect to Pulsar2 (unless you use a HUB like Ascom or MaxPoint)

Here is more info on possible connections: <http://www.geminitescope.com/Manuals/connect1.pdf>

Detailed info on connector pinout: <http://www.geminitescope.com/Manuals/GeminiPulsar2PinoutInformation.pdf>

You have the following choices for controlling Pulsar2 over the USB/serial port

- 1 Pulsar Commander – to load databases, set parameters, homing and waking, etc.
- 2 The ASCOM platform, after installing the Pulsar ascom driver (available from the downloads site)
- 3 Any planetarium software, either by selecting LX200 (non GPS) or ASCOM telescope.

Upgrading the firmware (Web and USB mode)

The preferred upgrade mode is the webupgrade which is Operation System independent:

http://www.geminitescope.com/Video/p2_webupgrade.wmv

or <http://www.geminitescope.com/Manuals/P2webupgrade.pdf>

USB upgrade procedure (with ver 5.40 and above accessible only as forced upgrade, see the Pulsar FAQ)

Do not attempt to USB upgrade a DC power socket version Pulsar2!

Install SamProg (available <http://www.geminitescope.com/gemini-pulsar-downloads-driver-ascom-firmware-database/> will work under WIN XP only) on the PC. Get the latest binary file (4.xx for hardware 1.1 and 5.xx for hw2.2) from the link above. Then proceed **exactly** as written below:

- 1 Switch Pulsar2 ON
- 2 In the Setup/System/Upgrade menu select Yes
- 3 wait cca 10sec, until you hear a double beep
- 4 Switch Pulsar2 OFF
- 5 connect Pulsar2 to the USB port of the PC
- 6 Switch Pulsar2 ON
- 7 open SamProg (you must see: Active connection 1)
- 8 browse and select the latest binary file
- 9 click „write flash” in SamProg
- 10 wait until done
- 11 click „exit” in SamProg
- 12 switch Pulsar2 OFF and ON
- 13 you are ready now (your settings and PEC remain unchanged)

Please read also the PulsarFAQ before starting the upgrade.

http://www.geminitescope.com/Manuals/Pulsar_FAQ.pdf

PROGRAMMING PEC

PEC will work only with an installed worm encoder (Hall sensor), standard on Gemini G4X mounts.
To program PEC you have the following options.

- 1 Use the hand controller to enter the PEC/New Pec menu and guide manually until you hear the double beep. Alternatively you can guide with an autoguider. In this case the autoguider must already be guiding when you enter the PEC menu. You may use the virtual hand controller of Pulsar Commander for the above operation.
- 2 Use PemPro to get an accurate PE curve and load this to Pulsar. You will need the latest Ascom driver for Pulsar2 installed and the latest version of Pempro.

During the learn period the display shows the corrections you have made and the worm counter position. You can check the counter position at any time during normal tracking by pressing the lamp button at the side of the hand unit.

The learning period is 1 worm rotation. There is a 10 sec waiting period before learning starts (beep) and a double beep at the end.

Hints for programming PEC

Choose a night with absolutely no wind and good seeing!

Use a crosshair eyepiece with at least 500x magnification!

Position the telescope around 0 deg. Declination and near the Meridian (PE is the largest here, but drift due to refraction is small)!

Polar align precisely, make a reference and enable refraction correction!

Set the Guide speed to match your magnification (e.g.: 500x - 3)!

The PEC learn algorithm accepts input from the USB port (LX200), the autoguider connector and naturally the joystick.

HAND CONTROLLER MENU

In the tables below the left column contains menu names and short explanation. The right column offers an explanation of the function. The expression "hotkey" refers to the appropriate keyboard buttons. The default values are in **bold characters**.

The first table contains the parameters of the mount. You find the data in the manual or consult the manufacturer!
The default setting is G-40/41/42. The Microstep resolution is managed automatically.

Mount Parameter (hotkey 6)	RA	DEC
Reduction - Total reduction of the drivesystem.	100 - 432 - 10000	432
MainGear - Reduction of the main gear, used for PEC purposes.	100 - 432 - 10000	-----
MotorRes - step/rev resolution of the stepper motors.	100/ 200 /400	100/ 200 /400
Rotation L/R - This defines the default rotation of the motors. Will depend on actual wiring of the motors. Set it so that tracking is correct.	Left/Right	On hotkey 4. for DEC.
MountType	Germ/Fork /AltAz(F disables swap tube and E/W of Meridian menu in Initialize, German sets goto mode to Pulsar2)	
TrackCurr - Tracking current (used up to 2x tracking speed)	800 mA (600 is the recommended minimum)	
GoToCur - The current applied to motors in GoTo.	1000 mA	
StopCur - The current applied to motors in standstill	400 mA (Should not be much smaller than tracking curr. to avoid jump at start.)	

Encoder res - Incremental encoder resolution	The encoders of the servo motors and the independent encoders of the mount can be specified here .
Motor Type - The motor used on the mount	Stepper or Servo
Red autose - Reduction automatic setting	Finds the total reduction of the mount if encoders are fitted. Indispensable for a friction drive like G53F or MoFoD.
Flip corr set - saves flip error for correction	Follow the instructions on the LCD Inhibited over 85 deg declination.
Set reference - saves the absolute position info of the encoders (if fitted)	Follow the instructions on the LCD

The table below is an overview of all other (user dependent) hand controller menu functions. Menus in **red** are ready after Initializing and correct parameter entry (Init, E/W, Lat/Long, Time) only.

Function	Description	
User Parameter Setup - (hotkey 6 and down)	RA	DEC
Guiding speed	1-9 (9 = sidereal)	
Center	10 (1 = 6x sidereal)	
Find	20	
Slew	50	
GoTo speed Can be set separately for RA and DEC.	Max 999(4,2deg/sec)	Max 999 (4,2deg/sec)
Ramp All telescopes must accelerate and decelerate. Otherwise the mount will be damaged soon.	1-9 (1=small acceleration)	1-9 (9=higt acceleration)
Backlash compensation	Not available here	Enter in min, sec of arc.
Swap Tube delay	You can enter a delay (in seconds) for the DEC rotation to start later than the RA.	
Pole Crossing Tube rotation North/South	The mount will not rotate 180 deg in RA if you want to look at the Northern sky. Tube rotation defines the direction of the polecross. Useful when you have cables on the telescope/camera.	
Latitude-Longitude in decimals Your observing site's data. The optional GPS module updates it automatically.	The longitude is negative to the East (0,-180) and positive to the west (0, 180)	
Autostop Local Enter the distance West of the meridian in Hours, Mins, where you want the mount to stop. Enable the function and tracking will stop at the preset meridian distance.	To mobilize the mount after Autostop, diable the function in the menu first, then select Sidereal rate. This function is designed for sleepy astrophotographers. S appears on display if stopped.	
Home pos.save This is the sleeping position of the telescope in your observatory. Slew the scope to this position, enter the menu and save! Works only with valid geographical position and time.	There is an internal battery that keeps the clock running when the unit is switched off. Next time you switch it ON, you can skip Initialize.	
Active speed (only with hotkey 0) Selects the active speed for	Menu available with hotkey 0, or select directly with hotkeys 2,3 (guide speed and progressive).	
Refraction correction (this is the real time King rate in both directions, plus correction for GoTo positioning)	On/Off r on display	On/Off r on display
Guest mode enter your password (four digit) and select ON. Only the joystick slew function is active now.	To exit, press Initialize (hotkey-), enter your password! If you forget your PIN: power Off/On.	
Umod sp.lim Stepper driving mode limiting speed.	The value is the speed limit for the voltage mode in acceleration, Above the limit current mode is used. Current mode is noisier but gives more torque. If your motors stall set a low value here like 500.	
GoTo mode Selects goto logic	See p. „Using the Intelligent Features“	
Read GPS prompts Pulsar2 to read time and position from a GPS.	Set NMEA 4800 baud on your GPS For Ver1 hand controller units only.	
Get refence initializes the mount based on encoder information	Follow the instructions on the LCD	
Set User rate 1,2,3 (hotkey 7 and up) This rate is superimposed on the tracking rate.	Min,sec,1/100s per minute of time	Deg, min, sec per minute of time
Rate select (hotkey 7)		
Sidereal (default)		
Lunar rate (sec/hr, "/hr)		
Solar rate (sec/hr, "/hr)		
Still e.g.: for terrestrial viewing.	Coordinates will be updated when you exit to Sidereal.	
User Defined Rate 1,2,3	Min,sec,1/100s per minute of time	Deg, min, sec per minute of time
Initialize (hotkey -)		
Select ref object	Use the databases here! Pulsar will ask for E/W meridian	









Initializing on reference objects.	position.
RA+DEC set	Enter coordinates of the reference object directly.
Time+Date set	Enter the date and time (in UT)!
Time Date Sid	Check time here!
Guided init	Enters the guided initializing mode that is the default when switching the unit on.
GoTo (hotkey GoTo)	Warning: positions below the horizon are not accessible!
Select Catalogue Star, M,NGC,USER	You can write your own database in Excel.csv format (for any catalogue, not just user) See the example star.csv below!
Swap tube (only with hotkey1, long press)	Enabled when the tube and the object (where the telescope points) are on the same side of the Meridian. If Autostop global limits are set and Swap tube is enabled, meridian flip will be automatic before GoTo (if necessary to avoid the autostop zone)
GoTo Ra Dec	Slews to coordinates.
GoTo Alt Az	Slews to Alt-Az coordinates.
GoTo Home (only with hotkey 5, long press) Programming: The mount must be in the desired home position. Enter the User Para menu, Home Pos/Save!	Takes the mount to the user programmed home position. If you turn the unit off this way, it will be ready for use when you switch it on - without initializing again. Long pressing when parked unparks the driver.
PEC (hotkey 8)	
Pec On/Off For RA pec. p or sine curve on display shows the status.	The PEC data is not lost after upgrade. PEC disables RA encoder reading.
New PEC Wait for the beep to start corrections! Double beep indicates the end.	Starts the learning period. Guide speed is automatically selected, PEC is turned off. After saving the PEC data the correction is automatically turned on in RA.
Real time Corr(ection) A function available for our customers with G53F or MoFoD mounts only.	Enabling real time correction will keep tracking within encoder precision, suitable for wide field unguided imaging. It is not compatible with autoguiding!!
Enc(oder)Sampling Select the number of encoder signals as the time base of the correction.	If you select negative sign, the cycle number, correction in msec and the time base in sec (x1000) appears in the top of the display (Ver2 hand controller only)
System (hotket 6 and up)	
U/Temp	Shows supply voltage and internal temperature of the driver unit.
Reset All - Resets all parameters to default	This may help in case the driver freezes. This will erase the internal log file also.
Backlight	Sets illumination level of the LCD.
Clock adjust (the entered value is not affected by upgrades)	You can correct clock frequency here to increase long term accuracy. Unit: seconds/10 days Example: you have measured the internal clock to be fast 46secs in 10 days. So you enter +46
IP settings	For direct internet access via Ethernet More info in the FAQ and webupgrade manuals.
LX200 baud	Set the speed for serial communication (for the serial port on the aux connector, for DC power plug Pulsars sets the USB port speed as well)
Encoders	Shows actual encoder position for debugging
Restart	Program restart without losing settings.
Sw. version	Lets you read the firmware and hw version.
USB mode serial/drive Units with DC power socket read the log from the web interface!!!	Selecting "drive" will let you read the internal log like from a pendrive. This log contains important information and is used to reveal the cause of a problem, if there is one. To read, select drive mode and connect to a PC like you would a Pendrive. To read the web interface, type the IP address as detailed in the web upgrade tutorial, add /log.txt, example: http://169.254.247.165/log.txt

 TROUBLESHOOTING

The mount does not track correctly	<p>Still rate, user rate selected (e.g.: auto stop function activated)</p> <p>You connected the DEC cable to the RA motor. (two connector models only) RA motor rotation incorrect. See: Initialize!</p>
Significant RA drift in tracking.	<p>Clock error not corrected. See the system menu in the table above!</p> <p>Incorrect rate selected (e.g.: Lunar, Solar, User, instead of Sidereal).</p>

	<i>Incorrect mount/motor parameters. Check the setup menu! Refraction correction disabled or incorrect (Initializing info incorrect).</i>
GoTo command not executed.	<i>The object is below the horizon. Incorrect date/time or geographical position setting. See: Initialize.</i>
"Knocking" of the DEC motor at start (affects guiding precision)	<i>Stop current too low. Increase to match the tracking current (setup menu)!</i>
"Knocking" of the RA motor during tracking..	<i>Supply voltage too low. Tracking current too low. Adjust in Mount setup! Power supply problem.</i>
Mount goes the wrong way in DEC during GoTo or manual slew.	<i>DEC motor rotation setup skipped or you crossed the meridian manually.</i>
PEC does not function	<i>PEC turned off (no p on the display appears). Missing magnet in the RA coupling. Magnet inserted with the wrong side out (applicable only if the magnet has been removed). Faulty sensor or contact problem at the mount end. Broken cable.</i>
Large GoTo error	<i>Incorrect polar alignment. Database error (check the coordinates). Motor stalled during the goto (low supply voltage, small goto current, too high goto speed.</i>
Internal logging blocked	<i>System/ Reset All will erase and restart logging. The log is automatically deleted and restarted when it superates the 64kByte size.</i>

KEY TO THE ICONS OF THE KEYBOARD

 1	E/W	Press for 3 sec: Swap tube
2		Select Guide speed
3		Select Progressive speed (one push of the joystick gives an offset of cca. 10")
4	N/S	Press for 3 sec.: reverse DEC rotation
5		Park/Unpark (press for 3 sec)
6		Setup (user, mount and system parameters)
7		Select tracking rate (also map light on Ver2 HC)
8	PEC	PEC menu
9		Press briefly: Recalibrate (after GoTo)
0		Select active speed
CE	GoTo	(clear entry or Escape) GoTo menu
-		(toggle +/- sign for coordinate entry) Initialize, Exit Guest mode (PIN needed)

Press any button to emergency stop a GoTo!


LX200 COMPATIBILITY

The Pulsar2 controller accepts many commands from LX200 compatible software. To see the list please visit the page at <http://www.geminitelescope.com/gemini-pulsar-downloads-driver-ascom-firmware-database/> Coordinates are handled in the full or compressed format, according to the request of the planetarium software.

Planetarium programs tested with Pulsar2: Desktop Universe, Guide7, The Sky, Skymap Pro, Carte du Ciel.

AUTOGUIDER PORT


Pulsar2 accepts Meade CCD type autoguider cables. Earlier SBIG cameras with Dsub connectors will need an adapter. Details of this are on the Pulsar1 homepage. The image below shows the Pulsar2 autoguider socket pinout. STV needs a inverted cable, STAR2000 and most cameras a direct cable.

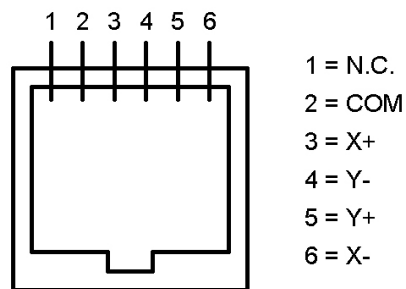

AUXILIARY PORT (8 PIN)

The auxiliary port may be used for:

- connecting a GPS unit (serial port),
- connecting an external homing signal (e.g.:cloud sensor),
- and other devices that may be useful.

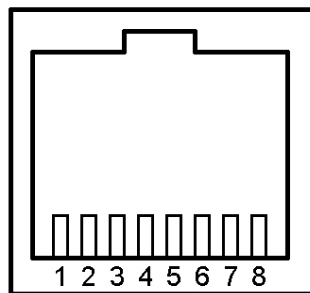

Front view of AUX connector

- 1 15 Volts
- 2 External homing
- 3 bus +
- 4 3,3 Volts
- 5 GND (GPS D9 pin5)
- 6 bus -
- 7 RS 232 out (GPS D9 pin3)
- 8 RS 232 in (GPS D9 pin2)

CATALOGUE DATA UPLOAD

Catalogue data upload to P2 (the catalogues are in Excel csv format)

- 1 Connect the unit (power ON) to the USB port of the PC
- 2 Start the program Pulsar Commander (Please download!)
- 3 Open the (virtual) COM port you are using
- 4 Select the catalogue you want to program in the pull down window of the Init menu (you can overwrite the name here e.g.: USER to Double)
- 5 Load the catalogue from its directory
- 6 Click "Send Catalogue"
- 7 Wait for the "Sent" message (may take several minutes for larger databases)


A Star, Messier and NGC database is available now (as preloaded before shipping). The following data fields are defined: Star (500), Messier (500), User (500), IC (8000), Pk (8000), Planet (8000) NGC (9999). The numbers in parentheses are the capacity limits in entries. There is a tutorial video at <http://www.youtube.com/watch?v=iwV-0tudPJQ&feature=youtu.be>

Example for database structure

Excel file format: (csv extension, values must be separated by ;)

Serial 9999	hh	mm	ss	deg	min	sec	Mag	Data (1 car)	Data (1 car)	Const (4 car)	Name (10 car)
28	19	50	47	8	52	6	0,77	0	0	Aql	Alp Aql
45	2	7	10	23	27	45	2	0	0	Ari	Alp Ari

Display (1 st line from table above)

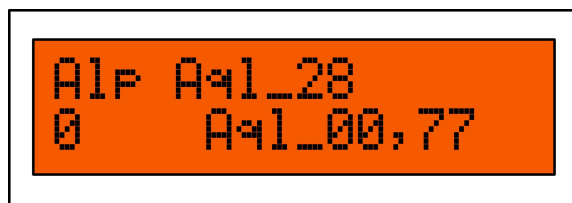

You can write your own User Database (500 entry) and can edit all other databases.

"The Deep Sky 2000 program is very nice in producing an EXCEL table via SQL commands. From the result only some columns have to be removed and resorted. So it's an easy task to fill the Pulsar tables." G.W. Austria

HARDWARE OPTIONS

The standard shipping package includes:

- Driver unit
- Hand Controller with 2m cable (extendable with a male/female VGA cable)
- 5,5/2,5mm DC power socket, center positive (from 06. 2013)

You will need a standard A-B type USB cable to connect Pulsar2 to a PC.

Options:


- Hand controller extension cable
- PEC encoder and cable (standard with G-42 mount)
- Autoguider cable (specify CCD)

Innovation and Service since 1996
GEMINI TELESCOPE DESIGN

www.geminitelescope.com



ual Febru

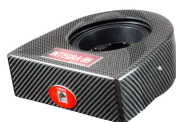

mini

